

## Appendix C - CR2500 and CR3500 Programming Code Matrix

---



# Table of Contents

## Batch Settings

Batch Send & Buffer Mode - Default .....	9 (A1)
Batch - Log Only Mode .....	9 (A2)
Batch - Send & Log Mode .....	9 (A3)
Batch - Transfer All Data in Memory .....	9 (A4)
Batch - Transfer Only Unsent Data in Memory.....	9 (B1)
Batch - Delete Scanned Data from Memory .....	9 (B2)
Batch - Enable Auto Transfer Buffer Memory .....	9 (B3)
Batch - Disable Auto Transfer Buffer Memory .....	9 (B4)
RS-232 - Batch-Cable Detect - Default .....	9 (C1)
RS-232 - Cabled - No Power .....	9 (C2)

## USB Settings

USB Keyboard Mode .....	9 (C3)
USB Downloader Mode .....	9 (C4)
USB Virtual COM One Way Mode .....	9 (D1)
USB Native Two Way Mode .....	9 (D2)
USB HID POS (Terminal 1D 131) .....	9 (D3)
Reset to USB Factory Defaults .....	9 (D4)

## PS/2 Settings

PS/2 Mode .....	9 (E1)
Reset to PS/2 Factory Defaults .....	9 (E2)

## RS-232 Settings

RS-232 One Way Mode .....	9 (E3)
RS-232 Two Way Mode .....	9 (E4)
Reset to RS-232 Factory Defaults .....	9 (F1)
RS-232 Interface - 7 Data Bits .....	9 (F2)
RS-232 Interface - 8 Data Bits - Default .....	9 (F3)
RS-232 Interface - 1200 Baud Rate .....	10 (A1)
RS-232 Interface - 2400 Baud Rate .....	10 (A2)
RS-232 Interface - 4800 Baud Rate .....	10 (A3)
RS-232 Interface - 9600 Baud Rate .....	10 (A4)
RS-232 Interface - 19200 Baud Rate .....	10 (B1)
RS-232 Interface - 38400 Baud Rate .....	10 (B2)
RS-232 Interface - 57600 Baud Rate - Default .....	10 (B3)
RS-232 Interface - 115200 Baud Rate .....	10 (B4)
RS-232 Interface - Even Parity .....	10 (C1)
RS-232 Interface - Odd Parity .....	10 (C2)
RS-232 Interface - No Parity - Default .....	10 (C3)

## Cabled Reader Time Out Settings

Cabled Reader Active Time Out 2 Hours - Default .....	10 (D1)
Cabled Reader Time Out - Never .....	10 (D2)

## RF/Bluetooth Communication

RF Bluetooth Standard Reliability Mode (max range) .....	10 (D3)
RF Bluetooth Standard Reliability Mode (max reliability) .....	10 (D4)
RF Two Way Mode .....	10 (E1)
Reset to RF Factory Defaults .....	10 (E2)

# Table of Contents

Bluetooth - Radio Auto Connect On - Default .....	10 (E3)
Bluetooth - Radio Auto Disconnect On .....	10 (E4)
Bluetooth - Radio Auto Connect Off .....	10 (F1)
Bluetooth - Radio Auto Disconnect Off - Default .....	10 (F2)
Bluetooth - Radio Time Out 90 Sec. - Default .....	10 (F3)
Bluetooth - Radio Time Out - 5 Min. ....	10 (F4)
Bluetooth - Radio Time Out - 10 Min. ....	11 (A1)
Bluetooth - Radio Time Out - 15 Min. ....	11 (A2)
Bluetooth - Radio Time Out - 30 Min. ....	11 (A3)
Bluetooth - Radio Time Out - 1 Hour .....	11 (A4)
Bluetooth - Radio Time Out - 2 Hours .....	11 (B1)
Bluetooth Radio - Out of Range Beep - On .....	11 (B2)
Bluetooth Radio - Out of Range Vibrate - On .....	11 (B3)
Bluetooth Radio - Out of Range Beep & Vibrate On .....	11 (B4)
Bluetooth Radio - Out of Range Beep & Vibrate Off .....	11 (C1)
Bluetooth Radio Disconnect .....	11 (C2)
Bluetooth Enable Auto Save.....	11 (C3)
Bluetooth Disable Auto Save - Default .....	11 (C4)
 <b>Bluetooth Connection Options</b>	
Disable Bluetooth Connection in Charging Cradle .....	11 (D1)
Enable Bluetooth Connection in Charging Cradle .....	11 (D2)
 <b>Global (All) Trigger Optimization and Settings</b>	
Global Trigger Optimization SXGA - Both Fields .....	11 (D3)
Global Trigger Optimization SXGA - High Density Field .....	11 (D4)
Global Trigger Optimization SXGA - Wide Field .....	11 (E1)
 <b>Left Trigger Optimization and Settings</b>	
Left Trigger Optimization SXGA - Both Fields .....	11 (E2)
Left Trigger Optimization SXGA - High Density Field .....	11 (E3)
Left Trigger Optimization SXGA - Wide Field .....	11 (E4)
Left Trigger - Take Picture .....	11 (F1)
 <b>Right Trigger Optimization and Settings</b>	
Right Trigger Optimization SXGA - Both Fields .....	11 (F3)
Right Trigger Optimization SXGA - High Density Field .....	11 (F4)
Right Trigger Optimization SXGA - Wide Field .....	12 (A1)
Right Trigger - Take Picture .....	12 (A2)
 <b>Handle Trigger Optimization and Settings</b>	
Handle Trigger Optimization SXGA - Both Fields .....	12 (A3)
Handle Trigger Optimization SXGA - High Density Field .....	12 (A4)
Handle Trigger Optimization SXGA - Wide Field .....	12 (B1)
Handle Trigger - Take Picture .....	12 (B2)
 <b>Continous Trigger Optimization and Settings</b>	
Continous Trigger Optimization SXGA - Both Fields .....	12 (B3)
Continous Trigger Optimization SXGA - High Density Field .....	12 (B4)
Continous Trigger Optimization SXGA - Wide Field .....	12 (C1)



# Table of Contents

---

Continuous Scan - Both Imagers .....	12 (C2)
Continuous Scan - Off - Default .....	12 (C3)
Continuous Scan Time Out Cabled - 2 hours - Default .....	12 (C4)
Continuous Scan Time Out Cabled - Always .....	12 (D1)
Continuous Scan Time Out Uncabled - 5 minutes - Default .....	12 (D2)
Continuous Scan Time Out Uncabled - 15 minutes .....	12 (D3)
Continuous Scan Time Out Uncabled - 30 minutes .....	12 (D4)
Continuous Scan Trigger Delay (0 Sec.) - Default .....	12 (E1)
Continuous Scan Trigger Delay (1 Sec.) .....	12 (E2)
Continuous Scan Trigger Delay (3 Sec.) .....	12 (E3)
Continuous Scan Duplicate Scan Delay (0 Sec.) - Default .....	12 (E4)
Continuous Scan Duplicate Scan Delay (1 Sec.) .....	12 (F1)
Continuous Scan Duplicate Scan Delay (3 Sec.) .....	12 (F2)

## Factory Default Settings

Reset to USB Factory Defaults .....	12 (F3)
Reset to PS/2 Factory Defaults .....	12 (F4)
Reset to RS-232 Factory Defaults .....	13 (A1)
Reset to RF One Way Factory Defaults .....	13 (A2)
Clear All CodeXML™ Rules .....	13 (A3)

## Symbologies

Aztec On .....	13 (B1)
Aztec Off - Default .....	13 (B2)
Codabar On - Default .....	13 (B3)
Codabar Off .....	13 (B4)
Codablock F On .....	13 (C1)
Codablock F Off - Default .....	13 (C2)
Code 11 Off .....	13 (C3)
Code 11 On - Default .....	13 (C4)
Code 11 - Checksum 1 digit .....	13 (D1)
Code 11 - Checksum 2 digit & Strip from Result .....	13 (D2)
Code 11 - Checksum 1 digit & Strip from Result .....	13 (D3)
Code 39 On - Default .....	13 (E1)
Code 39 Off .....	13 (E2)
Code 39 Enable Checksum .....	13 (E3)
Code 39 Disable Checksum - Default .....	13 (E4)
Code 39 Enable Checksum and Strip .....	13 (F1)
Code 39 Extended Full ASCII On .....	13 (F2)
Code 39 Extended Full ASCII Off - Default .....	13 (F3)
Code 39 Short Margin On - Default .....	13 (F4)
Code 39 Short Margin Off .....	14 (A1)
Code 39 Trioptic On .....	14 (A2)
Code 39 Trioptic Off .....	14 (A3)
Code 93 On - Default .....	14 (A4)
Code 93 Off .....	14 (B1)
Code 128 On - Default .....	14 (B2)
Code 128 Off .....	14 (B3)

# Table of Contents

Code 128 Short Margin On - Default .....	14 (B4)
Code 128 Short Margin Off .....	14 (C1)
Composite On .....	14 (C2)
Composite Off - Default .....	14 (C3)
Data Matrix Rectangle On .....	14 (C4)
Data Matrix Rectangle Off - Default .....	14 (D1)
Data Matrix Inverse On .....	14 (D2)
Data Matrix Inverse Off - Default .....	14 (D3)
Enable improved reading capability for hard to decode Data Matrix symbols - Default .....	14 (D4)
Disable improved reading capability for hard to decode Data Matrix symbols .....	14 (E1)
Int 2 of 5 On - Default .....	14 (E2)
Int 2 of 5 Off .....	14 (E3)
Int 2 of 5 2 Digits On .....	14 (E4)
Int 2 of 5 2 Digits Off - Default .....	14 (F1)
Int 2 of 5 4 Digits On .....	14 (F2)
Int 2 of 5 4 Digits Off .....	14 (F3)
Int 2 of 5 with Control Character Stripped .....	14 (F4)
Maxicode On .....	15 (A1)
Maxicode Off - Default .....	15 (A2)
Matrix 2 of 5 On .....	15 (A3)
Matrix 2 of 5 Off - Default .....	15 (A4)
Micro PDF417 On .....	15 (B1)
Micro PDF417 Off - Default .....	15 (B2)
MSI Plessy On .....	15 (B3)
MSI Plessy Off - Default .....	15 (B4)
Macro PDF 417 On .....	15 (C1)
Macro PDF 417 Off - Default .....	15 (C2)
NEC 2 of 5 On .....	15 (C3)
NEC 2 of 5 Off - Default .....	15 (C4)
Disable OCR - Default .....	15 (D1)
Enable OCR .....	15 (D2)
PDF 417 On - Default .....	15 (D3)
PDF 417 Off .....	15 (D4)
Postal Codes - Australian Post On .....	15 (E1)
Postal Codes - Japan Post On .....	15 (E2)
Postal Codes - KIX On .....	15 (E3)
Postal Codes - Postnet On .....	15 (E4)
Postal Codes - Planet On .....	15 (F1)
Postal Codes - Planet & Postnet On .....	15 (F2)
Postal Codes - Royal Mail On .....	15 (F3)
Postal Codes - 4 State CB On (intelligent mail) .....	15 (F4)
Postal Codes - All Postal Codes Off - Default .....	16 (A1)
QR Code On .....	16 (A2)
QR Code Off - Default .....	16 (A3)
QR Code Enable Checksum .....	16 (A4)
QR Code Disable Checksum .....	16 (B1)
QR Code Inverse and Standard On .....	16 (B2)
QR Code Inverse On .....	16 (B3)
Enable All QR Code On .....	16 (B4)
Inverse and Micro QR Code On .....	16 (C1)



# Table of Contents

RSS Limited On (formerly RSS - Now GS1 DataBar) .....	16 (C3)
RSS 14 & RSS Truncated On (formerly RSS - Now GS1 DataBar) .....	16 (C4)
RSS 14 Stacked On (formerly RSS - Now GS1 DataBar) .....	16 (D1)
RSS Expanded On (formerly RSS - Now GS1 DataBar) .....	16 (D2)
All RSS On (formerly RSS - Now GS1 DataBar) .....	16 (D3)
All RSS Off - Default (formerly RSS - Now GS1 DataBar) .....	16 (D4)
Telepen - On -Default .....	16 (E1)
Telepen - Off .....	16 (E2)
UPC On - Default .....	16 (E3)
UPC Off .....	16 (E4)
UPC Short Margin Enabled - Default .....	16 (F1)
UPC Short Margin Disabled .....	16 (F2)
UPC Extension On - Default .....	16 (F3)
UPC Extension Off .....	16 (F4)
<b>Reader Feedback</b>	
Vibrate On Beep On .....	17 (A1)
Vibrate On Beep Off .....	17 (A2)
Vibrate Off Beep On - Default .....	17 (A3)
Beep - Off .....	17 (A4)
Beep - Low .....	17 (B1)
Beep - High - Default .....	17 (B2)
<b>Lock Out Link</b>	
Lockout Link Mode .....	17 (B3)
Unlock Link Mode .....	17 (B4)
<b>Targeting Settings</b>	
Targeting - On - Default .....	17 (C1)
Targeting - Off .....	17 (C2)
<b>Reader Power Off Settings</b>	
Reader Power Off - 1 Hour .....	17 (D2)
Reader Power Off - 2 Hours Default .....	17 (D3)
Reader Power Off - 4 Hours .....	17 (D4)
<b>Symbol Readability Index</b>	
Readability Index Output Enabled .....	17 (E1)
Readability Index Output Disabled - Default .....	17 (E2)
Code Readability Index Rule .....	17 (F4)
<b>Miscellaneous Settings</b>	
Reader ID and Firmware Version .....	17 (F2)
Reader Settings Locked .....	18 (A1)
Reader Settings Unlocked .....	18 (A2)
<b>Keyboard Mapping</b>	
US English Keyboard Mapping - Default No Leading 0 .....	18 (A3)

# Table of Contents

- US English Keyboard Mapping - Leading 0 ..... 18 (A4)
- Alt + Keypad Numbers ..... 18 (B1)
- Custom Keyboard Mapping ..... 18 (B2)
- French Keyboard ..... 18 (B3)
- German Keyboard ..... 18 (B4)
- Japanese Keyboard ..... 18 (C1)
- Control Characters for Non Printable ASCII ..... 18 (C2)
- Universal Keyboard Mapping ..... 18 (C3)

**Operating System Settings**

- Enable Alternative OS (Windows CE/MAC/Linux)..... 18 (C4)
- Disable Alternative OS..... 18 (D1)

**Targeting Zone Tolerances**

- Targeting Zone Tolerances (200) ..... 18 (E3)
- Targeting Zone Tolerances (400) ..... 18 (E4)
- Targeting Zone Tolerances (1600) ..... 18 (F1)

**Decode Optimization**

- Optimize Decode Zone 1-D Only (1024 x 200) ..... 18 (F2)
- Optimize Decode Zone Small 2-D (480 x 480) ..... 18 (F3)
- Optimize Decode Zone Medium 2-D (512 x 512) ..... 18 (F4)
- Optimize Decode Zone Large 2-D (640 x 640) ..... 19 (A1)
- Optimize Decode Zone Reset to Default (1024 x 640) ..... 19 (A2)

**Mirroring Settings**

- Mirroring - On ..... 19 (A3)
- Mirroring - Off Default ..... 19 (A4)

**Prefix/Suffix Settings**

- Prefix - Comma ..... 19 (B1)
- Prefix - Space ..... 19 (B2)
- Prefix - Tab (USB Keyboard Mode ONLY) ..... 19 (B3)
- Prefix - Tab (RS-232 Mode ONLY) ..... 19 (B4)
- Prefix - Erase/None ..... 19 (C1)
- Prefix - CRLF ..... 19 (C2)
- Suffix - Carriage Return ..... 19 (C3)
- Suffix - Comma ..... 19 (C4)
- Suffix - Line Feed ..... 19 (D1)
- Suffix Carriage Return Line Feed ..... 19 (D2)
- Suffix - Space ..... 19 (D3)
- Suffix - Enter ..... 19 (D4)
- Suffix - Tab (USB Keyboard Mode ONLY) ..... 19 (E1)
- Suffix - Tab (RS-232 Mode ONLY) ..... 19 (E2)
- Suffix - Erase/None - Default ..... 19 (E3)
- Erase Prefix & Suffix Data ..... 19 (E4)

**Reader Text Commands**

- Reader Text Commands On ..... 19 (F1)
- Reader Text Commands Off - Default ..... 19 (F2)



# Table of Contents

---

## Factory Default and Reset Codes

Reset to USB Factory Defaults .....	19 (F3)
Reset to PS/2 Factory Defaults .....	19 (F4)
Reset to RS-232 Factory Defaults .....	20 (A1)
Reset to RF One Way Factory Defaults .....	20 (A2)
Bootloader Mode .....	20 (A3)
Clear All CodeXML™ Rules .....	20 (B1)
Clear All Stored Data .....	20 (B2)
Save Settings .....	20 (B3)

## Motion Detection Scanning

Motion Detection Scanning On .....	20 (B4)
Motion Detection Off.....	20 (C1)

## CR3500 - Backlight

CR3500 - Backlight Intensity Low .....	20 (C2)
CR3500 - Backlight Intensity Medium - Default .....	20 (C3)
CR3500 - Backlight Intensity High.....	20 (C4)
CR3500 - Backlight Off.....	20 (D1)
CR3500 - Backlight Off 3 Seconds - Default .....	20 (D2)
CR3500 - Backlight Off 6 Seconds.....	20 (D3)
CR3500 - Backlight Off 10 Seconds.....	20 (D4)

## Anti-Glare

Enable Anti-Glare - Default .....	20 (E1)
Disable Anti-Glare .....	20 (E2)
























# CR2500 and CR3500 Programming Codes

<p><b>Batch Send &amp; Buffer Mode - Default</b></p>  <p>M075_01</p> <p><b>A1</b></p>	<p><b>Batch - Log Only Mode</b></p>  <p>M072_01</p> <p><b>A2</b></p>	<p><b>Batch - Send &amp; Log Mode</b></p>  <p>M076_01</p> <p><b>A3</b></p>	<p><b>Batch - Transfer All Data in Memory</b></p>  <p>M077_02</p> <p><b>A4</b></p>
<p><b>Batch - Transfer Only Unsent Data in Memory</b></p>  <p>M078_02</p> <p><b>B1</b></p>	<p><b>Batch - Delete Scanned Data from Memory</b></p>  <p>M071_01</p> <p><b>B2</b></p>	<p><b>Batch - Enable Auto Transfer Buffer Memory</b></p>  <p>M070_01</p> <p><b>B3</b></p>	<p><b>Batch - Disable Auto Transfer Buffer Memory</b></p>  <p>M069_01</p> <p><b>B4</b></p>
<p><b>RS-232 - Batch-Cable Detect - Default</b></p>  <p>M073_02</p> <p><b>C1</b></p>	<p><b>RS-232 - Cabled-No Power</b></p>  <p>M074_02</p> <p><b>C2</b></p>	<p><b>USB Keyboard Mode</b></p>  <p>M134_02</p> <p><b>C3</b></p>	<p><b>USB Downloader Mode</b></p>  <p>M133_01</p> <p><b>C4</b></p>
<p><b>USB Virtual COM 1 Way Mode</b></p>  <p>M668_01</p> <p><b>D1</b></p>	<p><b>USB Native Two Way Mode</b></p>  <p>M135_04</p> <p><b>D2</b></p>	<p><b>USB HID POS (Terminal ID 131)</b></p>  <p>M736_01</p> <p><b>D3</b></p>	<p><b>Reset to USB Factory Defaults</b></p>  <p>M049_03</p> <p><b>D4</b></p>
<p><b>PS/2 Mode</b></p>  <p>M126_01</p> <p><b>E1</b></p>	<p><b>Reset to PS/2 Factory Defaults</b></p>  <p>M060_03</p> <p><b>E2</b></p>	<p><b>RS-232 One Way Mode</b></p>  <p>M131_01</p> <p><b>E3</b></p>	<p><b>RS-232 Two Way Mode</b></p>  <p>M132_01</p> <p><b>E4</b></p>
<p><b>Reset to RS-232 Factory Defaults</b></p>  <p>M418_02</p> <p><b>F1</b></p>	<p><b>RS-232 Interface 7 Data Bits</b></p>  <p>M100_01</p> <p><b>F2</b></p>	<p><b>RS-232 Interface 8 Data Bits - Default</b></p>  <p>M101_01</p> <p><b>F3</b></p>	<p><b>Intentionally Left Blank</b></p> <p><b>F4</b></p>

# CR2500 and CR3500 Programming Codes

<p>RS-232 Interface 1200 Baud Rate</p>  <p>M092_01</p> <p style="text-align: right;">A1</p>	<p>RS-232 Interface 2400 Baud Rate</p>  <p>M093_01</p> <p style="text-align: right;">A2</p>	<p>RS-232 Interface 4800 Baud Rate</p>  <p>M094_01</p> <p style="text-align: right;">A3</p>	<p>RS-232 Interface 9600 Baud Rate</p>  <p>M095_01</p> <p style="text-align: right;">A4</p>
<p>RS-232 Interface 19200 Baud Rate</p>  <p>M096_01</p> <p style="text-align: right;">B1</p>	<p>RS-232 Interface 38400 Baud Rate</p>  <p>M097_01</p> <p style="text-align: right;">B2</p>	<p>RS-232 Interface 57600 Baud Rate - Default</p>  <p>M098_01</p> <p style="text-align: right;">B3</p>	<p>RS-232 Interface 115200 Baud Rate</p>  <p>M099_01</p> <p style="text-align: right;">B4</p>
<p>RS-232 Interface Even Parity</p>  <p>M102_01</p> <p style="text-align: right;">C1</p>	<p>RS-232 Interface Odd Parity</p>  <p>M104_01</p> <p style="text-align: right;">C2</p>	<p>RS-232 Interface No Parity - Default</p>  <p>M103_01</p> <p style="text-align: right;">C3</p>	<p>Intentionally Left Blank</p> <p style="text-align: right;">C4</p>
<p>Cabled Reader Active Time Out 2 Hours</p>  <p>M136_01</p> <p style="text-align: right;">D1</p>	<p>Cabled Reader Time Out Never (Default)</p>  <p>M137_01</p> <p style="text-align: right;">D2</p>	<p>RF Bluetooth Standard Reliability Mode (max range)</p>  <p>M127_01</p> <p style="text-align: right;">D3</p>	<p>RF Bluetooth Standard Reliability Mode (max reliability)</p>  <p>M128_01</p> <p style="text-align: right;">D4</p>
<p>RF Two Way Mode</p>  <p>M129_02</p> <p style="text-align: right;">E1</p>	<p>Reset to RF Factory Defaults</p>  <p>M684_01</p> <p style="text-align: right;">E2</p>	<p>Bluetooth - Radio Auto Connect On - Default</p>  <p>M068_01</p> <p style="text-align: right;">E3</p>	<p>Bluetooth - Radio Auto Disconnect On</p>  <p>M066_01</p> <p style="text-align: right;">E4</p>
<p>Bluetooth - Radio Auto Connect Off</p>  <p>M067_01</p> <p style="text-align: right;">F1</p>	<p>Bluetooth - Radio Auto Disconnect Off - Default</p>  <p>M065_01</p> <p style="text-align: right;">F2</p>	<p>Bluetooth - Radio Time Out 90 Sec. - Default</p>  <p>M125_01</p> <p style="text-align: right;">F3</p>	<p>Bluetooth - Radio Time Out - 5 Min.</p>  <p>M121_01</p> <p style="text-align: right;">F4</p>

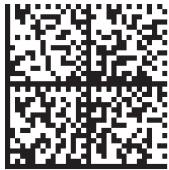

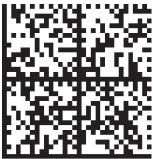



















# CR2500 and CR3500 Programming Codes

<p><b>Bluetooth - Radio Time Out - 10 Min.</b></p>  <p>M122_01</p> <p><b>A1</b></p> <p><b>Bluetooth - Radio Time Out - 2 Hours</b></p>  <p>M120_01</p> <p><b>B1</b></p>	<p><b>Bluetooth - Radio Time Out - 15 Min.</b></p>  <p>M123_01</p> <p><b>A2</b></p> <p><b>Bluetooth Radio - Out of Range Beep - On</b></p>  <p>M583_01</p> <p><b>B2</b></p>	<p><b>Bluetooth - Radio Time Out - 30 Min.</b></p>  <p>M124_01</p> <p><b>A3</b></p> <p><b>Bluetooth Radio - Out of Range Vibrate - On</b></p>  <p>M582_01</p> <p><b>B3</b></p>	<p><b>Bluetooth - Radio Time Out - 1 Hour</b></p>  <p>M119_01</p> <p><b>A4</b></p> <p><b>Bluetooth Radio - Out of Range Beep &amp; Vibrate On</b></p>  <p>M587_01</p> <p><b>B4</b></p>
<p><b>Bluetooth Radio - Out of Range Beep &amp; Vibrate OFF</b></p>  <p>M581_01</p> <p><b>C1</b></p>	<p><b>Bluetooth Radio Disconnect</b></p>  <p>M114_02</p> <p><b>C2</b></p>	<p><b>Enable Auto Save</b></p>  <p>M746_01</p> <p><b>C3</b></p>	<p><b>Disable Auto Save (Default)</b></p>  <p>M747_01</p> <p><b>C4</b></p>
<p><b>Disable Bluetooth connection in Charging Cradle</b></p>  <p>M704_01</p> <p><b>D1</b></p>	<p><b>Enable Bluetooth Connection in Charging Cradle</b></p>  <p>M705_01</p> <p><b>D2</b></p>	<p><b>Global Trigger Optimization SXGA - Both Fields</b></p>  <p>M613_03</p> <p><b>D3</b></p>	<p><b>Global Trigger Optimization SXGA - High Density Field</b></p>  <p>M614_03</p> <p><b>D4</b></p>
<p><b>Global Trigger Optimization SXGA - Wide Field</b></p>  <p>M615_03</p> <p><b>E1</b></p>	<p><b>Left Trigger Optimization SXGA - Both Fields</b></p>  <p>M631_02</p> <p><b>E2</b></p>	<p><b>Left Trigger Optimization SXGA - High Density Field</b></p>  <p>M632_02</p> <p><b>E3</b></p>	<p><b>Left Trigger Optimization SXGA - Wide Field</b></p>  <p>M633_02</p> <p><b>E4</b></p>
<p><b>Left Trigger - Take Picture</b></p>  <p>M179_01</p> <p><b>F1</b></p>	<p><b>Intentionally Left Blank</b></p> <p><b>F2</b></p>	<p><b>Right Trigger Optimization SXGA - Both Fields</b></p>  <p>M640_02</p> <p><b>F3</b></p>	<p><b>Right Trigger Optimization SXGA - High Density Field</b></p>  <p>M641_02</p> <p><b>F4</b></p>

























# CR2500 and CR3500 Programming Codes

<p><b>Right Trigger Optimization SXGA - Wide Field</b></p>  <p>M642_02</p> <p style="text-align: right;"><b>A1</b></p>	<p><b>Right Trigger - Take Picture</b></p>  <p>M186_01</p> <p style="text-align: right;"><b>A2</b></p>	<p><b>Handle Trigger Optimization SXGA - Both Fields</b></p>  <p>M622_03</p> <p style="text-align: right;"><b>A3</b></p>	<p><b>Handle Trigger Optimization SXGA - High Density Field</b></p>  <p>M623_03</p> <p style="text-align: right;"><b>A4</b></p>
<p><b>Handle Trigger Optimization SXGA - Wide Field</b></p>  <p>M624_03</p> <p style="text-align: right;"><b>B1</b></p>	<p><b>Handle Trigger - Take Picture</b></p>  <p>M154_04</p> <p style="text-align: right;"><b>B2</b></p>	<p><b>Continous Trigger Optimization SXGA - Both Fields</b></p>  <p>M649_02</p> <p style="text-align: right;"><b>B3</b></p>	<p><b>Continous Trigger Optimization SXGA - High Density Field</b></p>  <p>M650_02</p> <p style="text-align: right;"><b>B4</b></p>
<p><b>Continous Trigger Optimization SXGA - Wide Field</b></p>  <p>M651_02</p> <p style="text-align: right;"><b>C1</b></p>	<p><b>Continuous Scan - Both Imagers</b></p>  <p>M138_01</p> <p style="text-align: right;"><b>C2</b></p>	<p><b>Continuous Scan - Off Default</b></p>  <p>M141_02</p> <p style="text-align: right;"><b>C3</b></p>	<p><b>Continous Scan Time Out Cabled - 2 hours Default</b></p>  <p>M136_01</p> <p style="text-align: right;"><b>C4</b></p>
<p><b>Continous Scan Time Out Cabled - Always</b></p>  <p>M137_01</p> <p style="text-align: right;"><b>D1</b></p>	<p><b>Continous Scan Time Out Uncabled - 5 minutes - Default</b></p>  <p>M145_01</p> <p style="text-align: right;"><b>D2</b></p>	<p><b>Continous Scan Time Out Uncabled - 15 minutes</b></p>  <p>M146_01</p> <p style="text-align: right;"><b>D3</b></p>	<p><b>Continous Scan Time Out Uncabled - 30 minutes</b></p>  <p>M147_01</p> <p style="text-align: right;"><b>D4</b></p>
<p><b>Continuous Scan Trigger Delay (0 Sec.) Default</b></p>  <p>M142_01</p> <p style="text-align: right;"><b>E1</b></p>	<p><b>Continuous Scan Trigger Delay (1 Sec.)</b></p>  <p>M143_01</p> <p style="text-align: right;"><b>E2</b></p>	<p><b>Continuous Scan Trigger Delay (3 Sec.)</b></p>  <p>M144_01</p> <p style="text-align: right;"><b>E3</b></p>	<p><b>Continuous Scan Duplicate Scan Delay (0 Sec.) - Default</b></p>  <p>M222_01</p> <p style="text-align: right;"><b>E4</b></p>
<p><b>Continuous Scan Duplicate Scan Delay (1 Sec.)</b></p>  <p>M223_01</p> <p style="text-align: right;"><b>F1</b></p>	<p><b>Continuous Scan Duplicate Scan Delay (3 Sec.)</b></p>  <p>M224_01</p> <p style="text-align: right;"><b>F2</b></p>	<p><b>Reset to USB Factory Defaults</b></p>  <p>M049_03</p> <p style="text-align: right;"><b>F3</b></p>	<p><b>Reset to PS/2 Factory Defaults</b></p>  <p>M060_03</p> <p style="text-align: right;"><b>F4</b></p>

# CR2500 and CR3500 Programming Codes

<p><b>Reset to RS-232 Factory Defaults</b></p>  <p>M418_02</p> <p><b>A1</b></p> <p><b>Aztec On</b></p>  <p>M273_01</p> <p><b>B1</b></p>	<p><b>Reset to RF One Way Factory Defaults</b></p>  <p>M684_01</p> <p><b>A2</b></p> <p><b>Aztec Off - Default</b></p>  <p>M272_01</p> <p><b>B2</b></p>	<p><b>Clear All CodeXML™ Rules</b></p>  <p>M052_01</p> <p><b>A3</b></p> <p><b>Codabar On - Default</b></p>  <p>M275_01</p> <p><b>B3</b></p>	<p><b>Intentionally Left Blank</b></p> <p><b>A4</b></p> <p><b>Codabar Off</b></p>  <p>M274_01</p> <p><b>B4</b></p>
<p><b>Codablock F On</b></p>  <p>M277_01</p> <p><b>C1</b></p>	<p><b>Codablock F Off - Default</b></p>  <p>M276_01</p> <p><b>C2</b></p>	<p><b>Code 11 Off</b></p>  <p>M393_01</p> <p><b>C3</b></p>	<p><b>Code 11 On - Default</b></p>  <p>M394_01</p> <p><b>C4</b></p>
<p><b>Code 11 - Checksum 1 digit</b></p>  <p>M395_01</p> <p><b>D1</b></p>	<p><b>Code 11 - Checksum 2 digit &amp; Strip from Result</b></p>  <p>M396_01</p> <p><b>D2</b></p>	<p><b>Code 11 - Checksum 1 digit &amp; Strip from Result</b></p>  <p>M397_01</p> <p><b>D3</b></p>	<p><b>Intentionally Left Blank</b></p> <p><b>D4</b></p>
<p><b>Code 39 On - Default</b></p>  <p>M235_01</p> <p><b>E1</b></p>	<p><b>Code 39 Off</b></p>  <p>M234_01</p> <p><b>E2</b></p>	<p><b>Code 39 Enable Checksum</b></p>  <p>M237_01</p> <p><b>E3</b></p>	<p><b>Code 39 Disable Checksum - Default</b></p>  <p>M236_01</p> <p><b>E4</b></p>
<p><b>Code 39 Enable Checksum and Strip</b></p>  <p>M238_01</p> <p><b>F1</b></p>	<p><b>Code 39 Extended Full ASCII On</b></p>  <p>M233_01</p> <p><b>F2</b></p>	<p><b>Code 39 Extended Full ASCII Off - Default</b></p>  <p>M232_01</p> <p><b>F3</b></p>	<p><b>Code 39 Short Margin On - Default</b></p>  <p>M390_01</p> <p><b>F4</b></p>

# CR2500 and CR3500 Programming Codes
























<p><b>Code 39 Short Margin Off</b></p>  <p>M389_01</p> <p><b>A1</b></p>	<p><b>Code 39 Trioptic On</b></p>  <p>M671_01</p> <p><b>A2</b></p>	<p><b>Code 39 Trioptic Off</b></p>  <p>M670_01</p> <p><b>A3</b></p>	<p><b>Code 93 On - Default</b></p>  <p>M281_02</p> <p><b>A4</b></p>
<p><b>Code 93 Off</b></p>  <p>M280_01</p> <p><b>B1</b></p>	<p><b>Code 128 On - Default</b></p>  <p>M283_01</p> <p><b>B2</b></p>	<p><b>Code 128 Off</b></p>  <p>M282_01</p> <p><b>B3</b></p>	<p><b>Code 128 Short Margin On - Default</b></p>  <p>M392_01</p> <p><b>B4</b></p>
<p><b>Code 128 Short Margin Off</b></p>  <p>M391_01</p> <p><b>C1</b></p>	<p><b>Composite On</b></p>  <p>M285_02</p> <p><b>C2</b></p>	<p><b>Composite Off - Default</b></p>  <p>M284_02</p> <p><b>C3</b></p>	<p><b>Data Matrix Rectangle On</b></p>  <p>M242_01</p> <p><b>C4</b></p>
<p><b>Data Matrix Rectangle Off - Default</b></p>  <p>M241_01</p> <p><b>D1</b></p>	<p><b>Data Matrix Inverse On</b></p>  <p>M239_01</p> <p><b>D2</b></p>	<p><b>Data Matrix Inverse Off - Default</b></p>  <p>M240_01</p> <p><b>D3</b></p>	<p><b>Enable improved reading capability for hard to decode datamatrix symbols - Default</b></p>  <p>M744_01</p> <p><b>D4</b></p>
<p><b>Disable improved reading capability for hard to decode datamatrix symbols - Default</b></p>  <p>M745_01</p> <p><b>E1</b></p>	<p><b>Int 2 of 5 On - Default</b></p>  <p>M244_01</p> <p><b>E2</b></p>	<p><b>Int 2 of 5 Off</b></p>  <p>M243_01</p> <p><b>E3</b></p>	<p><b>Int 2 of 5 2 Digits On</b></p>  <p>M246_01</p> <p><b>E4</b></p>
<p><b>Int 2 of 5 2 Digits Off - Default</b></p>  <p>M245_02</p> <p><b>F1</b></p>	<p><b>Int 2 of 5 4 Digits On</b></p>  <p>M248_01</p> <p><b>F2</b></p>	<p><b>Int 2 of 5 4 Digits Off</b></p>  <p>M247_01</p> <p><b>F3</b></p>	<p><b>Int 2 of 5 with Control Character Stripped</b></p>  <p>M685_01</p> <p><b>F4</b></p>

# CR2500 and CR3500 Programming Codes
















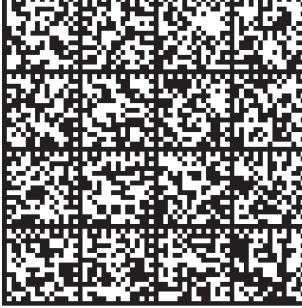

<p><b>Maxicode On</b></p>  <p>M289_04</p> <p><b>A1</b></p>	<p><b>Maxicode Off - Default</b></p>  <p>M288_01</p> <p><b>A2</b></p>	<p><b>Matrix 2 of 5 On</b></p>  <p>M675_01</p> <p><b>A3</b></p>	<p><b>Matrix 2 of 5 Off Default</b></p>  <p>M674_01</p> <p><b>A4</b></p>
<p><b>Micro PDF417 On</b></p>  <p>M301_01</p> <p><b>B1</b></p>	<p><b>Micro PDF417 Off - Default</b></p>  <p>M300_01</p> <p><b>B2</b></p>	<p><b>MSI Plessey On</b></p>  <p>M291_01</p> <p><b>B3</b></p>	<p><b>MSI Plessey Off - Default</b></p>  <p>M290_01</p> <p><b>B4</b></p>
<p><b>Macro PDF 417 On</b></p>  <p>M287_01</p> <p><b>C1</b></p>	<p><b>Macro PDF 417 Off - Default</b></p>  <p>M286_01</p> <p><b>C2</b></p>	<p><b>NEC 2 of 5 On</b></p>  <p>M673_01</p> <p><b>C3</b></p>	<p><b>NEC 2 of 5 Off - Default</b></p>  <p>M672_01</p> <p><b>C4</b></p>
<p><b>Disable OCR - Default</b></p>  <p>M712_01</p> <p><b>D1</b></p>	<p><b>Enable OCR</b></p>  <p>M713_01</p> <p><b>D2</b></p>	<p><b>PDF 417 On - Default</b></p>  <p>M293_01</p> <p><b>D3</b></p>	<p><b>PDF 417 Off</b></p>  <p>M292_01</p> <p><b>D4</b></p>
<p><b>Postal Codes Australian Post On</b></p>  <p>M252_01</p> <p><b>E1</b></p>	<p><b>Postal Codes Japan Post On</b></p>  <p>M253_01</p> <p><b>E2</b></p>	<p><b>Postal Codes KIX On</b></p>  <p>M254_01</p> <p><b>E3</b></p>	<p><b>Postal Codes Postnet On</b></p>  <p>M257_01</p> <p><b>E4</b></p>
<p><b>Postal Codes Planet On</b></p>  <p>M256_01</p> <p><b>F1</b></p>	<p><b>Postal Codes Planet &amp; Postnet On</b></p>  <p>M255_01</p> <p><b>F2</b></p>	<p><b>Postal Codes Royal Mail On</b></p>  <p>M258_01</p> <p><b>F3</b></p>	<p><b>4-State CB On (Intelligent Mail)</b></p>  <p>M748_01</p> <p><b>F4</b></p>



# CR2500 and CR3500 Programming Codes

<p><b>Postal Codes</b> All Postal Codes Off - Default</p>  <p>M259_01</p> <p style="text-align: right;"><b>A1</b></p>	<p><b>QR Code On</b></p>  <p>M261_01</p> <p style="text-align: right;"><b>A2</b></p>	<p><b>QR Code Off - Default</b></p>  <p>M260_01</p> <p style="text-align: right;"><b>A3</b></p>	<p><b>QR Code Enable Checksum</b></p>  <p>M265_01</p> <p style="text-align: right;"><b>A4</b></p>
<p><b>QR Code Disable Checksum</b></p>  <p>M264_01</p> <p style="text-align: right;"><b>B1</b></p>	<p><b>QR Code Inverse and Standard On</b></p>  <p>M263_01</p> <p style="text-align: right;"><b>B2</b></p>	<p><b>QR Code Inverse On</b></p>  <p>M262_01</p> <p style="text-align: right;"><b>B3</b></p>	<p><b>All QR Code On (includes Micro QR)</b></p>  <p>M609_03</p> <p style="text-align: right;"><b>B4</b></p>
<p><b>Inverse and Micro QR Code On</b></p>  <p>M687_03</p> <p style="text-align: right;"><b>C1</b></p>	<p><b>Intentionally Left Blank</b></p> <p style="text-align: right;"><b>C2</b></p>	<p><b>GS1 DataBar Limited On (formerly RSS)</b></p>  <p>M268_01</p> <p style="text-align: right;"><b>C3</b></p>	<p><b>GS1 DataBar 14/Truncated 14 On (formerly RSS)</b></p>  <p>M271_01</p> <p style="text-align: right;"><b>C4</b></p>
<p><b>GS1 DataBar 14 Stacked On (formerly RSS)</b></p>  <p>M270_01</p> <p style="text-align: right;"><b>D1</b></p>	<p><b>GS1 DataBar Expanded On (formerly RSS)</b></p>  <p>M269_01</p> <p style="text-align: right;"><b>D2</b></p>	<p><b>All GS1 DataBar On (formerly RSS)</b></p>  <p>M267_01</p> <p style="text-align: right;"><b>D3</b></p>	<p><b>All GS1 DataBar Off (Default) (formerly RSS)</b></p>  <p>M266_01</p> <p style="text-align: right;"><b>D4</b></p>
<p><b>Telepen - On - Default</b></p>  <p>M677_01</p> <p style="text-align: right;"><b>E1</b></p>	<p><b>Telepen - Off</b></p>  <p>M676_01</p> <p style="text-align: right;"><b>E2</b></p>	<p><b>UPC On - Default</b></p>  <p>M295_01</p> <p style="text-align: right;"><b>E3</b></p>	<p><b>UPC Off</b></p>  <p>M294_01</p> <p style="text-align: right;"><b>E4</b></p>
<p><b>UPC Short Margin Enabled - Default</b></p>  <p>M299_01</p> <p style="text-align: right;"><b>F1</b></p>	<p><b>UPC Short Margin Disabled</b></p>  <p>M298_01</p> <p style="text-align: right;"><b>F2</b></p>	<p><b>UPC Extension On - Default</b></p>  <p>M297_01</p> <p style="text-align: right;"><b>F3</b></p>	<p><b>UPC Extension Off</b></p>  <p>M296_01</p> <p style="text-align: right;"><b>F4</b></p>









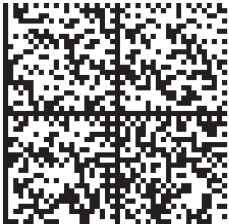




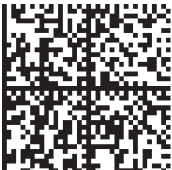

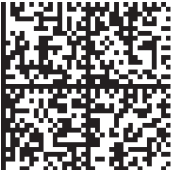








# CR2500 and CR3500 Programming Codes

<p>Vibrate On Beep On</p>  <p>M107_01</p> <p>A1</p> <p>Beep - Low</p>  <p>M111_01</p> <p>B1</p>	<p>Vibrate On Beep Off</p>  <p>M109_01</p> <p>A2</p> <p>Beep - High - Default</p>  <p>M112_01</p> <p>B2</p>	<p>Vibrate Off Beep On - Default</p>  <p>M108_01</p> <p>A3</p> <p>Lockout Link Mode</p>  <p>M710_02</p> <p>B3</p>	<p>Beep - Off</p>  <p>M110_01</p> <p>A4</p> <p>Unlock Link Mode</p>  <p>M711_01</p> <p>B4</p>
<p>Targeting - On Default</p>  <p>M055_01</p> <p>C1</p>	<p>Targeting - Off</p>  <p>M054_01</p> <p>C2</p>	<p>Intentionally Left Blank</p> <p>C3</p>	<p>Intentionally Left Blank</p> <p>C4</p>
<p>Intentionally Left Blank</p> <p>D1</p>	<p>Reader Power Off - 1 Hour</p>  <p>M691_02</p> <p>D2</p>	<p>Reader Power Off - 2 Hours Default</p>  <p>M688_02</p> <p>D3</p>	<p>Reader Power Off - 4 Hours</p>  <p>M689_02</p> <p>D4</p>
<p>Readability Index Output Enabled</p>  <p>M062_02</p> <p>E1</p>	<p>Readability Index Output Disabled</p>  <p>M063_02</p> <p>E2</p>	<p>Code Readability Index Rule</p>  <p>M061_02</p>	
<p>Intentionally Left Blank</p> <p>F1</p>	<p>Reader ID and Firmware Version</p>  <p>M153_01</p> <p>F2</p>	<p>F4</p>	


















# CR2500 and CR3500 Programming Codes

<p><b>Reader Settings Locked</b></p>  <p>M429_01</p> <p><b>A1</b></p>	<p><b>Reader Settings Unlocked</b></p>  <p>M428_01</p> <p><b>A2</b></p>	<p><b>US English Keyboard Mapping - Default No Leading 0</b></p>  <p>M172_01</p> <p><b>A3</b></p>	<p><b>US English Keyboard Mapping - Leading 0</b></p>  <p>M602_01</p> <p><b>A4</b></p>
<p><b>Alt + Keypad Numbers</b></p>  <p>M173_01</p> <p><b>B1</b></p>	<p><b>Custom Keyboard Mapping</b></p>  <p>M171_01</p> <p><b>B2</b></p>	<p><b>French Keyboard</b></p>  <p>M603_01</p> <p><b>B3</b></p>	<p><b>German Keyboard</b></p>  <p>M604_01</p> <p><b>B4</b></p>
<p><b>Japanese Keyboard</b></p>  <p>M605_01</p> <p><b>C1</b></p>	<p><b>Control Characters for Non Printable ASCII</b></p>  <p>M606_01</p> <p><b>C2</b></p>	<p><b>Universal Keyboard Mapping</b></p>  <p>M173_01</p> <p><b>C3</b></p>	<p><b>Alternative OS Enable (Windows CE/MAC/Unix/Linux)</b></p>  <p>M585_02</p> <p><b>C4</b></p>
<p><b>Alternative OS Disable</b></p>  <p>M584_02</p> <p><b>D1</b></p>	<p><b>Intentionally Left Blank</b></p> <p><b>D2</b></p>	<p><b>Intentionally Left Blank</b></p> <p><b>D3</b></p>	<p><b>Intentionally Left Blank</b></p> <p><b>D4</b></p>
<p><b>Intentionally Left Blank</b></p> <p><b>E1</b></p>	<p><b>Intentionally Left Blank</b></p> <p><b>E2</b></p>	<p><b>Targeting Zone Tolerances (200)</b></p>  <p>M195_01</p> <p><b>E3</b></p>	<p><b>Targeting Zone Tolerances (400)</b></p>  <p>M194_01</p> <p><b>E4</b></p>
<p><b>Targeting Zone Tolerances (1600)</b></p>  <p>M196_01</p> <p><b>F1</b></p>	<p><b>Optimize Decode Zone 1-D Only (1024 x 200)</b></p>  <p>M209_01</p> <p><b>F2</b></p>	<p><b>Optimize Decode Zone Small 2-D (480 x 480)</b></p>  <p>M210_01</p> <p><b>F3</b></p>	<p><b>Optimize Decode Zone Medium 2-D (512 x 512)</b></p>  <p>M211_01</p> <p><b>F4</b></p>

# CR2500 and CR3500 Programming Codes

<p><b>Optimize Decode Zone Large 2-D (640 x 640)</b></p>  <p>M212_01      <b>A1</b></p> <p><b>Prefix - Comma</b></p>  <p>M159_02      <b>B1</b></p>	<p><b>Optimize Decode Zone Reset to Default (1024 x 640)</b></p>  <p>M213_01      <b>A2</b></p> <p><b>Prefix - Space</b></p>  <p>M164_02      <b>B2</b></p>	<p><b>Mirroring - On</b></p>  <p>M182_01      <b>A3</b></p> <p><b>Prefix - Tab (USB Keyboard Mode ONLY)</b></p>  <p>M166_01      <b>B3</b></p>	<p><b>Mirroring - Off Default</b></p>  <p>M181_02      <b>A4</b></p> <p><b>Prefix - Tab (RS-232 Mode ONLY)</b></p>  <p>M218_02      <b>B4</b></p>
<p><b>Prefix - Erase/None Default</b></p>  <p>M404_01      <b>C1</b></p>	<p><b>Prefix - CRLF</b></p>  <p>M214_02      <b>C2</b></p>	<p><b>Suffix - Carriage Return</b></p>  <p>M168_04      <b>C3</b></p>	<p><b>Suffix - Comma</b></p>  <p>M160_04      <b>C4</b></p>
<p><b>Suffix - Line Feed</b></p>  <p>M169_04      <b>D1</b></p>	<p><b>Suffix Carriage Return Line Feed</b></p>  <p>M170_04      <b>D2</b></p>	<p><b>Suffix - Space</b></p>  <p>M165_04      <b>D3</b></p>	<p><b>Suffix - Enter</b></p>  <p>M161_04      <b>D4</b></p>
<p><b>Suffix - Tab (USB Keyboard Mode ONLY)</b></p>  <p>M167_04      <b>E1</b></p>	<p><b>Suffix - Tab (RS-232 Mode ONLY)</b></p>  <p>M219_04      <b>E2</b></p>	<p><b>Suffix - Erase/None - Default</b></p>  <p>M405_02      <b>E3</b></p>	<p><b>Erase Prefix &amp; Suffix Data</b></p>  <p>M406_02      <b>E4</b></p>
<p><b>Reader Text Commands On</b></p>  <p>M198_01      <b>F1</b></p>	<p><b>Reader Text Commands Off - Default</b></p>  <p>M197_01      <b>F2</b></p>	<p><b>Reset to USB Factory Defaults</b></p>  <p>M049_03      <b>F3</b></p>	<p><b>Reset to PS/2 Factory Defaults</b></p>  <p>M060_03      <b>F4</b></p>

# CR2500 and CR3500 Programming Codes

<p><b>Reset to RS-232 Factory Defaults</b></p>  <p>M418_02</p> <p><b>A1</b></p>	<p><b>Reset to RF One Way Factory Defaults</b></p>  <p>M684_01</p> <p><b>A2</b></p>	<p><b>Bootloader Mode</b></p>  <p>M692_01</p> <p><b>A3</b></p>	<p><b>Intentionally Left Blank</b></p> <p><b>A4</b></p>
<p><b>Clear All CodeXML™ Rules</b></p>  <p>M052_01</p> <p><b>B1</b></p>	<p><b>Clear All Stored Data</b></p>  <p>M071_01</p> <p><b>B2</b></p>	<p><b>Save Settings</b></p>  <p>M188_02</p> <p><b>B3</b></p>	<p><b>Motion Detection Scanning On</b></p>  <p>M701_01</p> <p><b>B4</b></p>
<p><b>Motion Detection Off</b></p>  <p>M702_01</p> <p><b>C1</b></p>	<p><b>CR3 - Backlight Intensity Low</b></p>  <p>M678_03</p> <p><b>C2</b></p>	<p><b>CR3 - Backlight Intensity Medium - Default</b></p>  <p>M679_03</p> <p><b>C3</b></p>	<p><b>CR3 - Backlight Intensity High</b></p>  <p>M680_03</p> <p><b>C4</b></p>
<p><b>CR3 - Backlight Off</b></p>  <p>M686_05</p> <p><b>D1</b></p>	<p><b>CR3 - Backlight Off 3 Seconds (Default)</b></p>  <p>M681_03</p> <p><b>D2</b></p>	<p><b>CR3 - Backlight Off 6 Seconds</b></p>  <p>M682_03</p> <p><b>D3</b></p>	<p><b>CR3 - Backlight Off 10 Seconds</b></p>  <p>M683_03</p> <p><b>D4</b></p>
<p><b>Enable Anti-Glare (Default)</b></p>  <p>M753_01</p> <p><b>E1</b></p>	<p><b>Disable Anti-Glare</b></p>  <p>M754_01</p> <p><b>E2</b></p>	<p><b>E3</b></p>	<p><b>E4</b></p>
<p><b>F1</b></p>	<p><b>F2</b></p>	<p><b>F3</b></p>	<p><b>F4</b></p>